



15x30 STANDARD HIP END - FRAME TENT



15x30 Standard Frame Tent			
Qty	FITTINGS		Part #
4	Corner		C1001
2	3 Way Crown		C1004
2	Side Tee Joint		C1003
1	Ridge Slide Tee 2"		C1010-2
1	15 Ft. Cable		CB15X
38	Canopy Pins		P102
Qty	Size	Poles	Color
7	14'-4"	Spreader	Red
4	10'-6"	Hip Rafter	Green
2	7'-8"	Rafter	Black
6	7'-8"	Legs	Black

INSTRUCTIONS:

1. Lay out four (4) corner fittings, two (2) tee fittings, and six (6) (red 14'4") spreader pipes to form a perimeter frame. Assemble and insert pins.
2. Put one (1) (red 14'4") spreader pipe and two (2) 3-way crown fittings into the center of the frame. Slide two (2) adjustable slide fittings to the center of the spreader pipe.
3. On one end, insert one (1) (green 10'6") hip rafter into a corner fitting and pin. Then insert the opposite end of the hip rafter into the 3-way crown fitting and pin. Insert one end of another hip rafter into the same 3-way fitting and pin. Then insert the opposite end into the corner fitting and pin.
4. Insert one end of the center spreader into the assembled 3-way crown fitting and pin.
5. Insert one end of the side rafter (orange 7'7") into the side tee fitting, and pin. Insert the opposite end into the slide fitting on the center spreader and pin. Repeat on the opposite side.
6. Repeat steps 3 and 4 to complete the remaining end of the frame.
7. Place the canopy over the frame and pull tight. Secure the canopy to the frame with buckle straps, tightening corner buckles first.
8. Raise one side of the canopy, insert leg pipes (black 7'8") into the corner and tee fittings, and pin.
9. Raise the opposite side of the canopy and install the remaining legs.
10. The canopy and frame can now be tied down.

Caution: Tie down only at corner or tee fittings. Do not tie to the spreader pipes, as they may bend.