


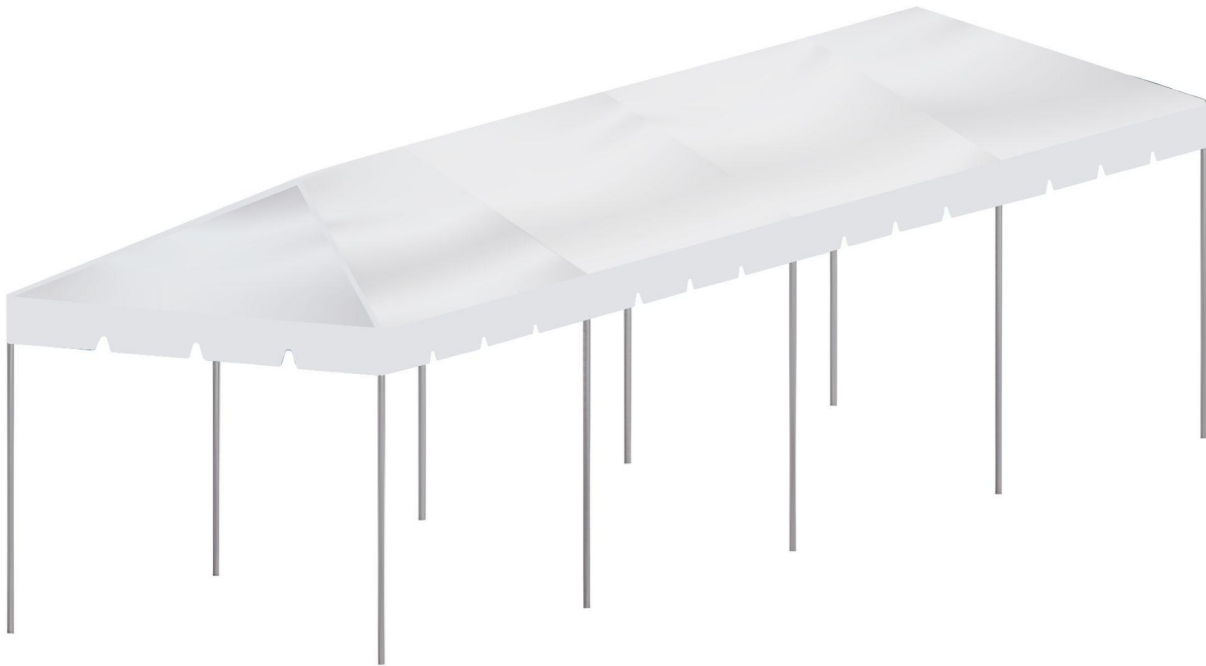

10x40 STANDARD HIP END - FRAME TENT



10x40 Standard Frame Tent			
Qty	FITTINGS		Part #
4	Corner		C1001
2	3 Way Crown		C1004
6	Side Tee Joint		C1003
3	Ridge Top Tee		C1008
1	10 Ft. Cable		CB10X
68	Canopy Pins		P102
Qty	Size	Poles	Color
12	9'-4"	Spreader	White
4	6'-10"	Hip Rafter	Yellow
6	4'-11"	Rafter	Blue
2	4'-4"	Top Spreader	Red
10	7'-8"	Legs	Black

INSTRUCTIONS :

1. Layout four (4) corner fittings, eight (8) (white 9'4"), and four (4) (4'4") spreader pipes to form a perimeter frame. Assemble and insert pins.
2. Assemble three (3) (white 9'4") spreader pipes into two (2) top tee fittings, and two (2) 6-way crown fittings into the center of the frame.
3. On one end, insert one (1) yellow (6'10") hip rafter into a corner fitting and pin. Then insert the opposite end of the hip rafter into a 6-way crown fitting and pin. Insert one end of another hip rafter into the same 6-way fitting and pin.
4. On the same end, insert one (1) (red 4'11") rafter pipe into the same 6-way fitting and pin. Do the same for the opposing side.
5. Repeat steps 3 and 4 for the other end. Insert one end of the center spreader into the assembled 3-way crown fitting and pin. Insert one end of the side rafter (red 4'11") into the side tee fitting and pin. Do the same for the opposite side. Repeat for all rafters.
6. Place the canopy over the frame and pull tight. Secure the canopy to the frame with buckle straps, tightening the corner buckles first.
7. Raise one side of the canopy, insert leg pipes (black 7'8") into the corner and tee fittings, and pin.
8. Raise the opposite side of the canopy and install the remaining legs.
9. The canopy and frame can now be tied down.

Caution: Tie down only at the corner or tee fittings. Do not tie to the spreader pipes, as they may bend.