CENTRAL TENT
www.centraltent.com

# 40x70 STANDARD HIP END - FRAME TENT

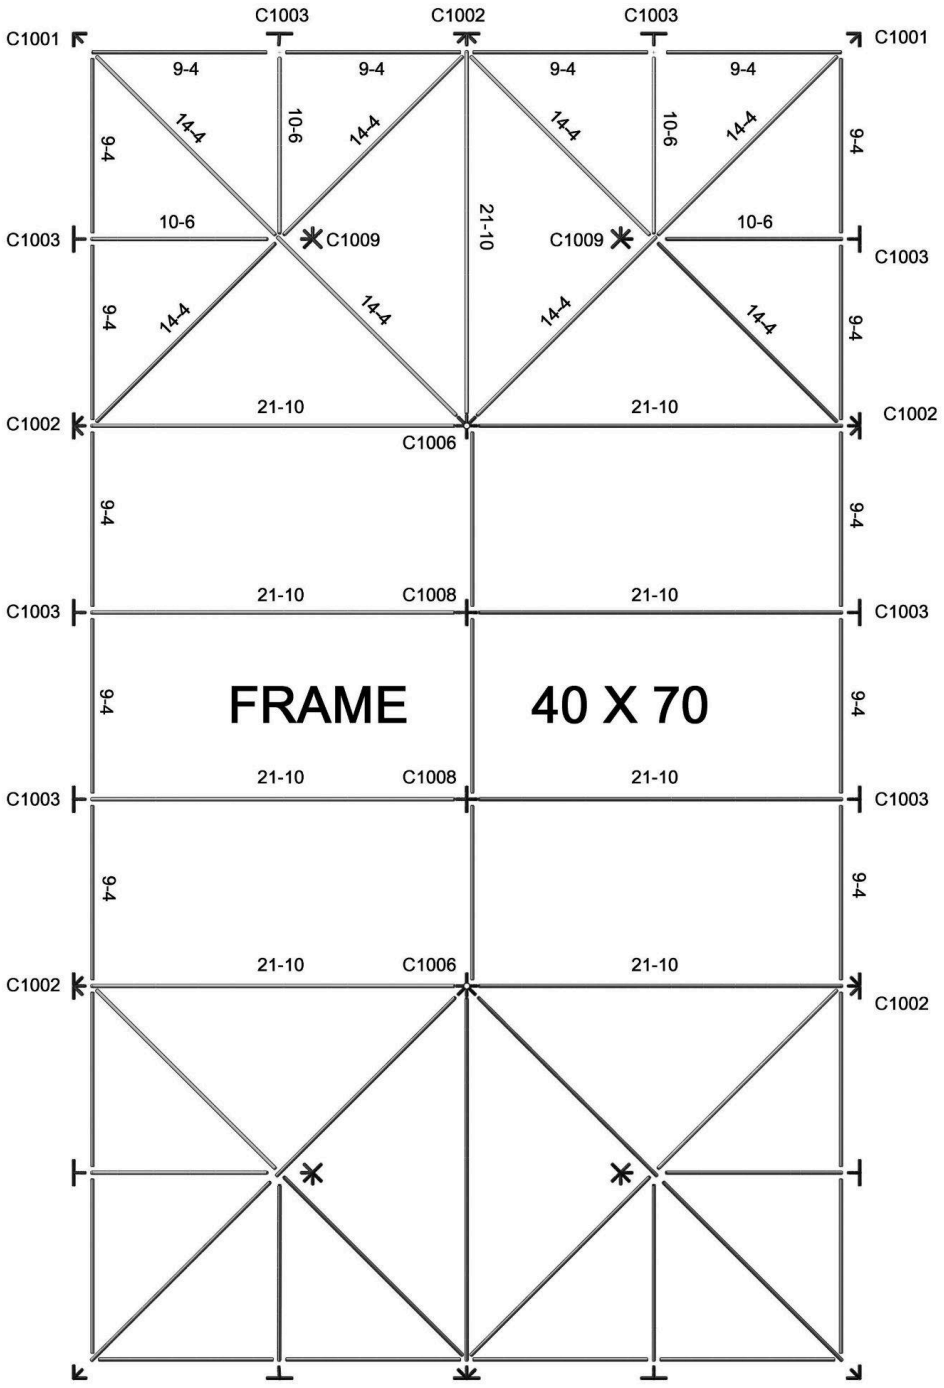

# FRAME 40 X 70

## Lifting 1 side of 70ft long

Ideal lifting point at 2 Corners and 2 Six Way Tees
Always lifting at the fittings, NOT at the poles

Insert and pin all legs on this side

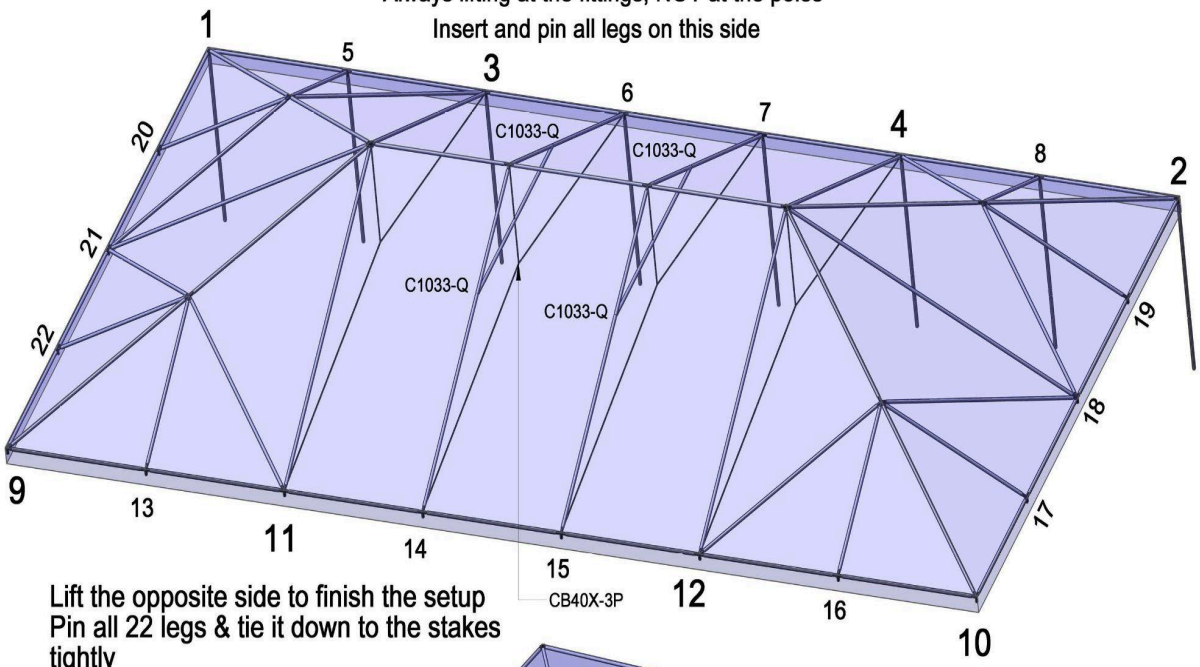


Lift the opposite side to finish the setup
Pin all 22 legs & tie it down to the stakes tightly

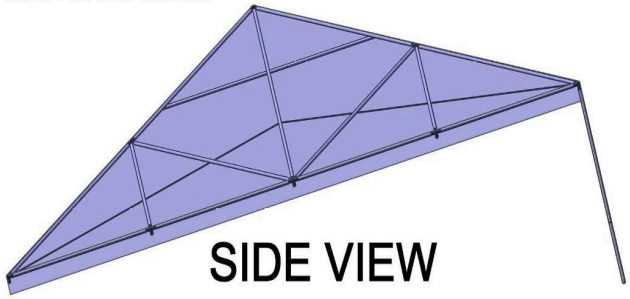

SIDE VIEW

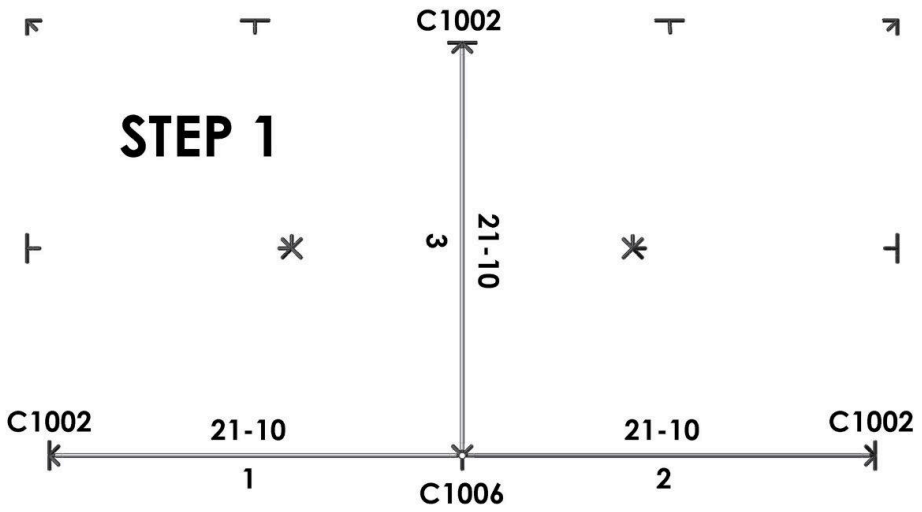


Still flat on the ground, insert & pin 21-10 to the left and right of C1006 Rafter arms

Twist this assembly vertically, use ladder to hold C1006 around 10'-8" high.
Insert & pin the 3rd 21-10 to C1006 arm. Insert & pin all C1002 to this assembly

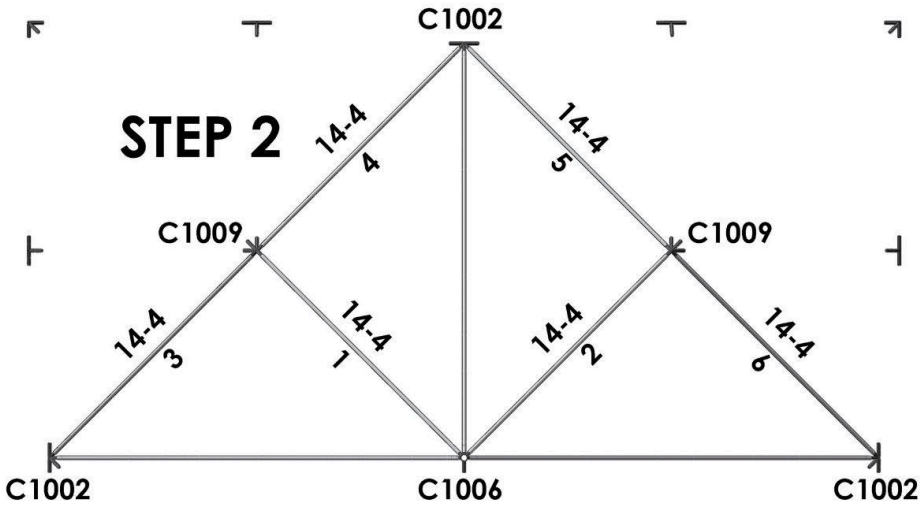


Insert & pin 14-4 to the left and right of C1006 Hip Rafter arms
Insert & pin both C1009 to this assemly
Insert both 14-4 to connect C1002 - C1009 - C1002 on the left & on the right
Pin all of 14-4 Half Hip Rafter

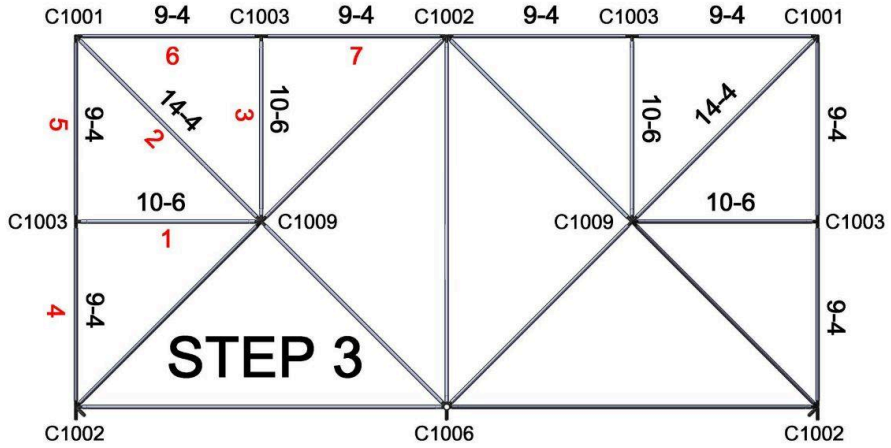


Insert one end of 10-6 and 14-4 to C1009, pin later after all 9-4 can be inserted to C1002-C1003-C1001-C1003-C1002 perimeter. Do the same on another side

Join C1006 -C1008, C1002-C1003 with 9-4 & C1008-C1003 with 21-10

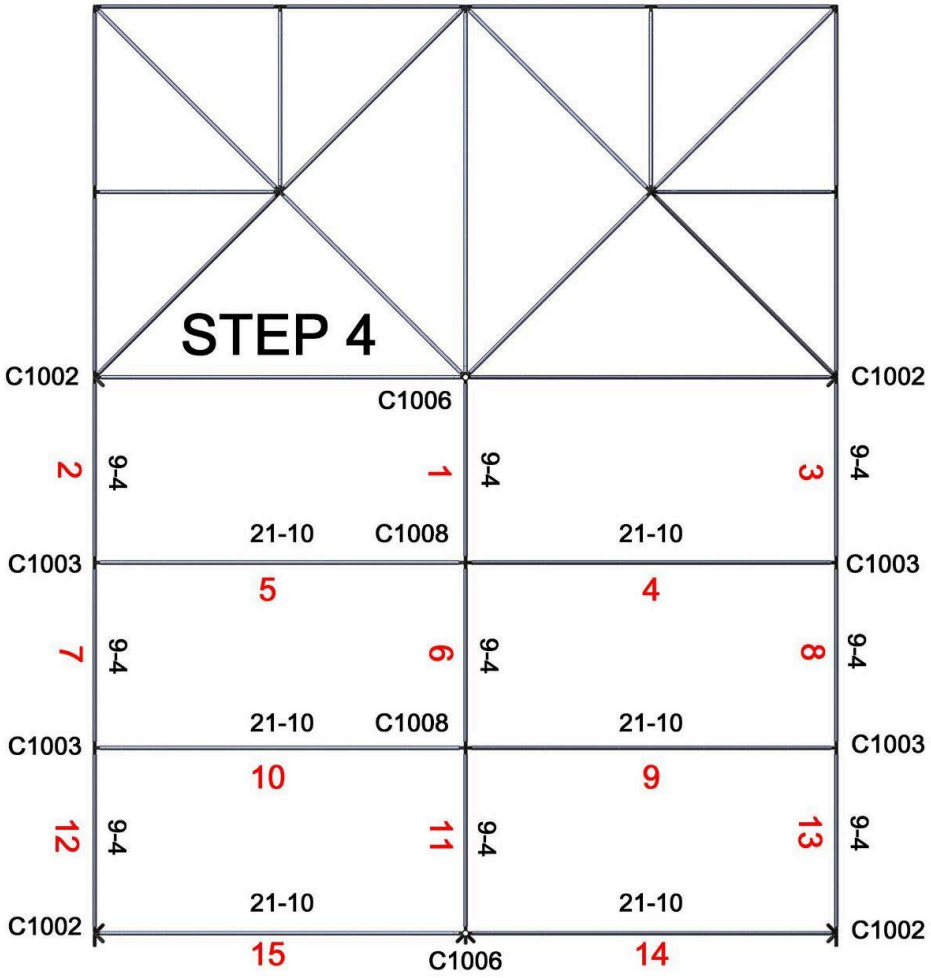

# STEP 5

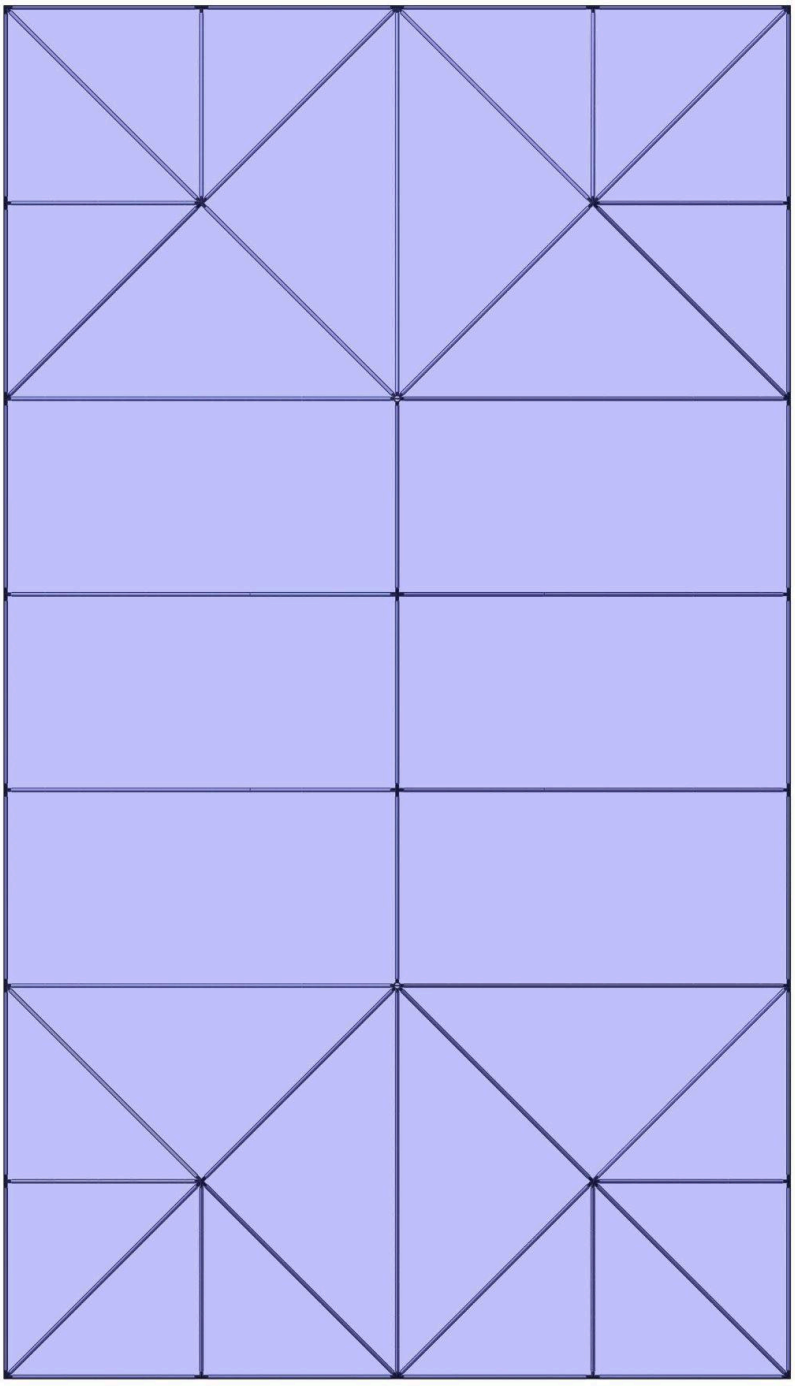

Do the same steps  to build the bottom End frame, cover the frame with Male40X - Mids40X- Female40X, strap to perimeter frame tightly