


10x10 Frame Tent

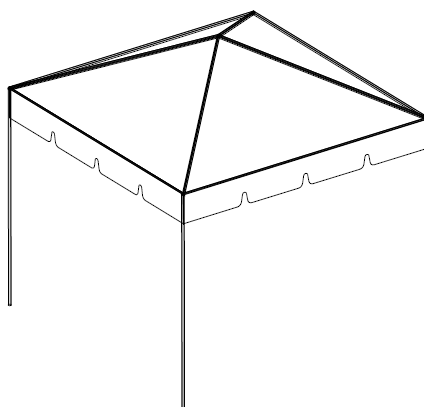

10 x 10

1. Layout four (4) corner fittings and four (4) (white 9'4") spreader pipe and form perimeter frame. Assemble and insert 16p nail
2. Put one (1) 4way crown fitting in center of frame with arms facing corners. Insert one (1) (yellow 6'10") hip rafter pipe in corner fitting and insert 16p nail. Then insert opposite end of hip rafter into 4way crown fitting and nail.
3. Insert the three (3) remaining hip rafters into 4way crown fitting and insert 16p nails.
4. Place canopy over frame and pull tight. Secure canopy to frame with buckles straps. Tighten corner buckles first.
5. Raise one side of canopy high enough to insert the leg pipes (black 7'8") into the corner fittings and 16p nail
6. Raise opposite side of the canopy and install remaining legs.
7. The canopy and frame can now be tie down. Caution ,tie down only at corner fittings. Do not tie to spreader pipe as they may bend.