


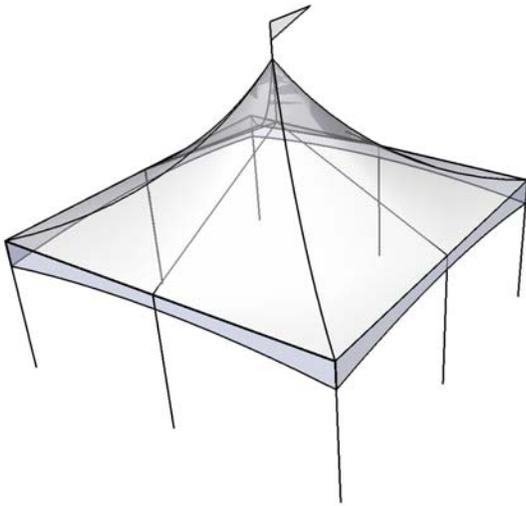

20x20 Quick Peak Frame Conversion



*** WARNING *** When handling tent top—DO NOT drag tent fabric across the floor. The rubbing and dragging will cause pin holes in the fabric.

Standard 2 in Tube Aluminum

Usage	Size	Description
8	9'-4"	Spreader (White)
4	14'-4"	Hip Rafter (Red)
4	10'-6"	Rafter (Green)
4	7'8"	Legs (black)

Fittings

Usage	Part No.	Description
4	C1001	Corner
4	C1003	Side Tee Joint
1	C1007	8 Way Crown (with conversion slot)
48	P102	J Style Pin
1		Conversion kit for 20x20 Poles, Mast flag,
1		Flags for Quick Peak tent
8		Ratchet ropes for legs
8		Base plates for top tiedowns

SETUP INSTRUCTIONS:

1. Lay out four (4) corner fittings, four (4) tee fittings, and eight (8) (white 9'4") spreader pipe and form perimeter frame. Assemble and insert 16p pins or J pin.
2. Put one (1) 8 way crown fitting in center of frame with high arms facing corners.
3. Insert one (1) (green 10'6") rafter into 8 way crown fitting adjacent to previous rafter and pins. Then insert opposite end of rafter into tee fitting and insert pins.
4. Insert one (1) (green 10'6") rafter into 8 way crown fitting adjacent to previous rafter and pins. Then insert opposite end of rafter into tee fitting and insert pins.
5. Continuing either clockwise or counterclockwise around frame, insert pipe into 8way crown fitting first.
6. Put the corner ring in to the outside tab on each corner. Do all four corner.
7. Lift up one side of the tent . Insert legs.
8. Insert mast set. Then assemble the flags.
9. Lift the other side of the tent and insert the legs.
10. Pull the ring on each legs. Tie with ratchet and loop it on to the base plate at each leg. Do not tighten the ratchet initially. After all the ratchets are assembled, go back and pull all the ratchets tight (this will make the tent evenly center).
11. Secured with stakes or other appropriate methods.

