


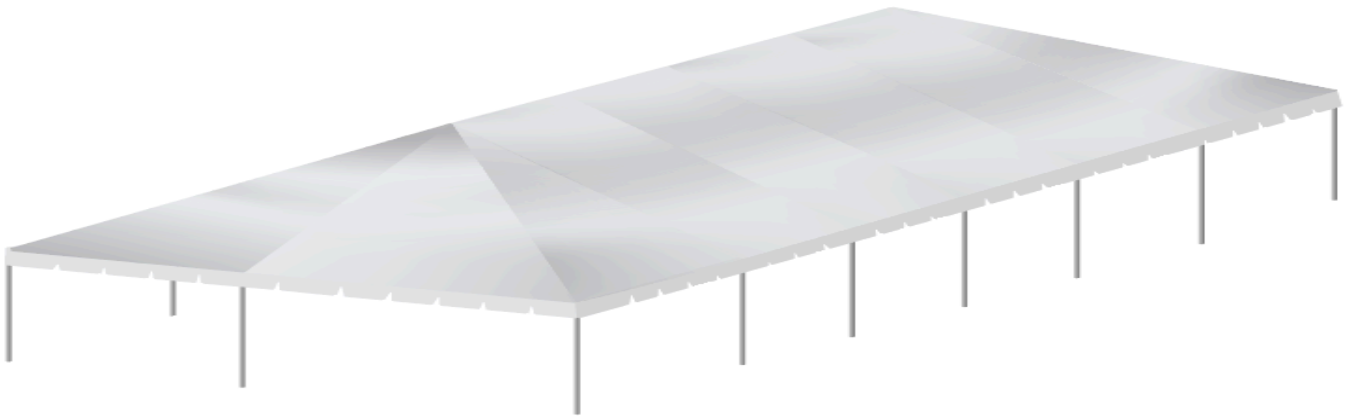

30x70 STANDARD HIP END - FRAME TENT



INSTRUCTION:

1. Lay out four (4) corner fittings, ten (10) side tee fittings, twelve (12) (red 14'4") spreader pipes, and two (2) (white 9'4") spreader pipes. Form the perimeter of the canopy frame, assemble and insert pins. Put two (2) 6-way crown fittings in the center of the frame with two (2) (red 14'4") spreader pipes and one (1) 9'4" spreader pipe (each end with a top tee) between the 6-way crowns.
2. Insert one (1) hip rafter (red 21'10½") onto a corner fitting and pin. Then insert the opposite end of the hip rafter onto the 6-way crown fitting.
3. Insert the adjacent hip rafter (red 21'10½") onto a 6-way crown fitting and pin. Insert the opposite end of the hip rafter onto the corner fittings and pin.
4. Insert three (3) rafters (green 16'1") onto the 6-way crown fitting and pin. Next, insert the opposite ends of the rafters onto the tee fittings and pin.

5. Insert a spreader pipe (red 14'4") onto the 6-way crown with the assembled rafter pipes and pin. Next, insert the top tee fitting into the other end of the spreader pipe and pin. Insert the 9'4" spreader pipe into the other end of the top tee and pin.
6. Insert two (2) (green 16'1") rafters onto the top tee fitting and pin. Then insert the opposite ends of the rafters into the tee fittings and pin.
7. Insert the remaining spreader (red 14'4") onto the top tee fitting and pin. Then insert the 6-way crown fitting onto the spreader and pin.
8. Assemble rafter pipes to the half 6-way crown, corners, and tee fittings as in steps 2, 3, and 4 to complete the frame end.
9. A frame support cable, which prevents the frame from spreading, may be attached at this time. Loop one end of the cable around the leg post of the center tee fitting, run it across the width of the frame to the other center tee fitting, and loop.
10. Place the canopy over the frame and pull tight. Secure the canopy to the frame with buckle straps. Tighten corner buckles first.
11. Raise one side of the canopy high enough to insert the leg pipes (black 7'8") onto the corner fittings and pin.
12. Repeat step 11 for the opposite side of the canopy.
13. Insert all remaining legs onto the tee fittings and pin.
14. The canopy and frame can now be tied down.

Caution: Tie down only at corner or tee fittings. Do not tie to the spreader pipes, as they may bend.

Note: Please let us know if you need a 10 ft. or 15 ft. span.