


20x20 Quick Peak tent

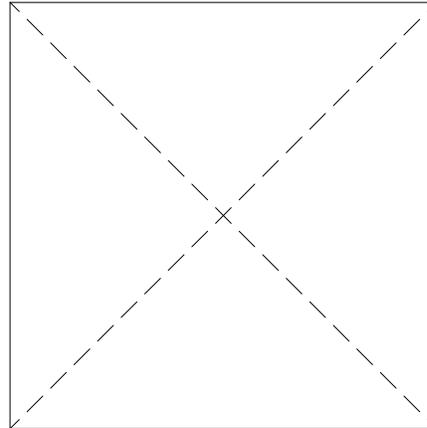

Heavy Duty D-Tube Aluminum

Usage	Size	Description
4	19'4"	Spreader
4	7'8"	Legs

Fittings

Usage	Part No.	Description
4	C1051	Quick Peak Corner
1	CB-QP-20X	Sets of 20x QP Cables (2/set)
1	MAST20X	Mast set (8'4" high)
4	C1011-Q	Quick Peak base plate
4	ROPE003	Ratchet rope
4	STK1X36	Stake 1x36
12	P102	J-Style pin 2"
4	A02	D-Loop pin 2"
1		Flags

INSTRUCTION

1. Layout all fittings (4 corners). Then layout all 19'4" poles to form perimeter. Insert all pins.
2. Hook one side of the cable with the other side. Do the same on the other corner. Hint: lift up the other corner about chest height to loop the cable with pin.
3. Make sure the cables are very tight when flat on the ground. The frame will have a little deflection (about .5 to 2 inches). If cables is not tight or too tight, check dimension.
4. With the frame flatly on ground, layout the top. Make sure the top is not caught on the cable or fitting-this will tear the tent. All four corners of the top should be near the corner of the frame.
5. Put the corner ring in to the outside tab on each corner. Do all four corner. Again, make sure the tent is not caught on the fittings or the cables. The final corner will need to be pulled with some force.
6. Lift up one side of the tent . Insert legs.
7. Insert mast set. Then assemble the flags.
8. Roll up the mast onto one side of the cable, then rolled it toward the center. Pull the other cable, then insert in to the mast slot. Make sure to put the safety cap on (blue color).
9. Lift the other side of the tent and insert the legs.
10. Pull the ring on each legs. Tie with ratchet and loop it on to the baseplate at each leg. Do not tighten the ratchet initially. After all the ratchets are assembled, go back and pull all the ratchets tight (this will make the tent evenly center).
11. Secured with stakes or other appropriate methods.

