




10x20 QUICK PEAK TENT

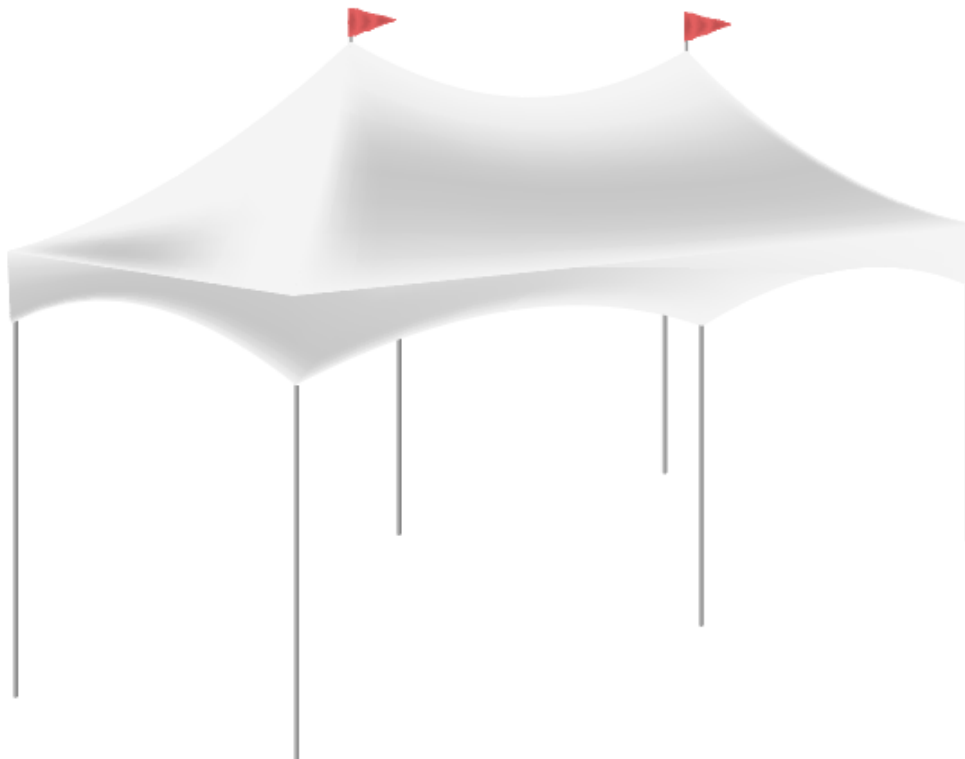

10x20 Quick Peak Frame Tent			
Qty	FITTINGS		Part #
4	Corner - Quick Peak		C1051
2	Tee - Quick Peak		C1052
2	Mast Set for 10x		MAST10X
2	Cable Set 10x		CBQP10X
6	Base Plates - Quick Peak		C1011-Q
6	Ratchet Ropes		ROPE003
26	Canopy Pins		P102
Qty	Size	Poles	Color
7	9'-4"	Spreader	White
6	7'-8"	Legs	Black

INSTRUCTION:

1. Lay out all fittings (four corners and two tees in the middle). Then lay out all 9'4" poles to form a perimeter. Form the frame perimeter. Assemble and insert sixteen (16) pins.

2. Hook one side of the cable to the other side. Do the same on the other corner.

Tip: Lift the corner about chest height to loop the cable with a pin.

3. Hook the cables on the other half of the tent. Make sure the cables are very tight when flat on the ground. The frame will have slight deflection (about 0.5 to 3 inches). If the cable is not tight or is too tight, check the dimensions.

4. With the frame flat on the ground, lay out the top. Make sure the top is not caught on the cable or fittings, as this may tear the tent. All four corners of the top should be near the corners of the frame. Insert the corner ring into the outside tab at each corner. Do this for all four corners. The final corner may require some force to pull into place.

5. Lift one side of the tent (the 20-foot side). Insert three legs (corner, center, corner).

6. Insert the mast set, then assemble the flags.

7. Roll the mast onto one side of the cable, then roll it toward the center. Pull the other cable, then insert it into the mast slot. Make sure to place the white safety cap on.

8. Lift the other side of the tent and insert the legs.

9. Pull the ring on each leg, tie with a ratchet, and loop it onto the baseplate at each leg. Do not tighten the ratchets initially. After all are assembled, go back and tighten them evenly to center the tent.

10. Secure with stakes or other appropriate methods.