





20x20 QUICK PEAK TENT

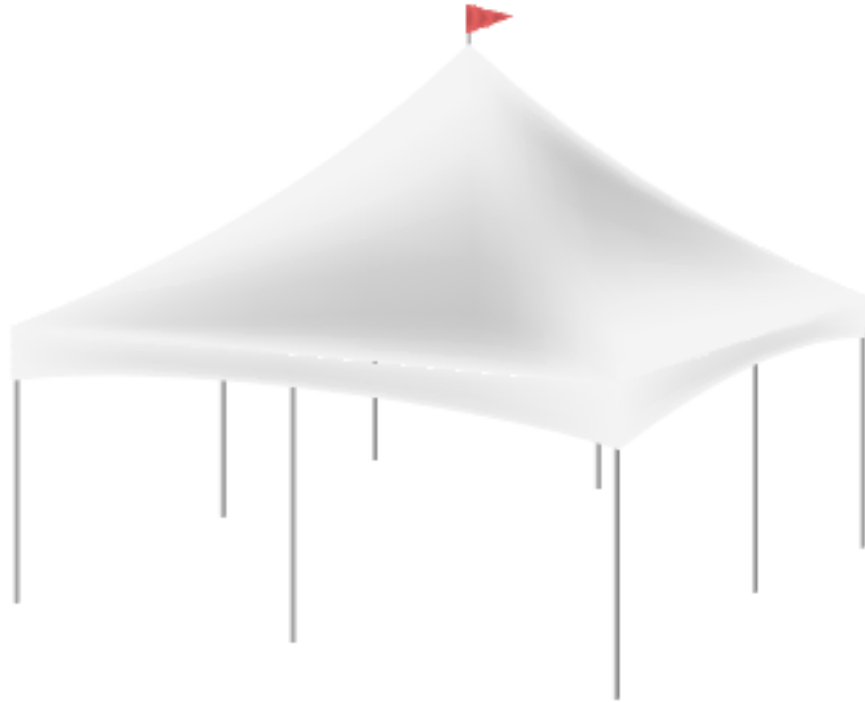

20x20 Quick Peak Frame Tent			
Qty	FITTINGS	Part #	
4	Corner - Quick Peak	C1053	
1	Mast Set for 20x	MAST20X	
1	Cable Set 20x	CBQP20X	
4	Base Plates - Quick Peak	C1011-Q	
4	Ratchet Mid Spreader	C1063	
4	Ratchet Ropes	ROPE003	
16	Canopy Pins	P103	
Qty	Size	DT Poles	Color
4	19'-4"	Spreader	
4	7'-8"	Legs	

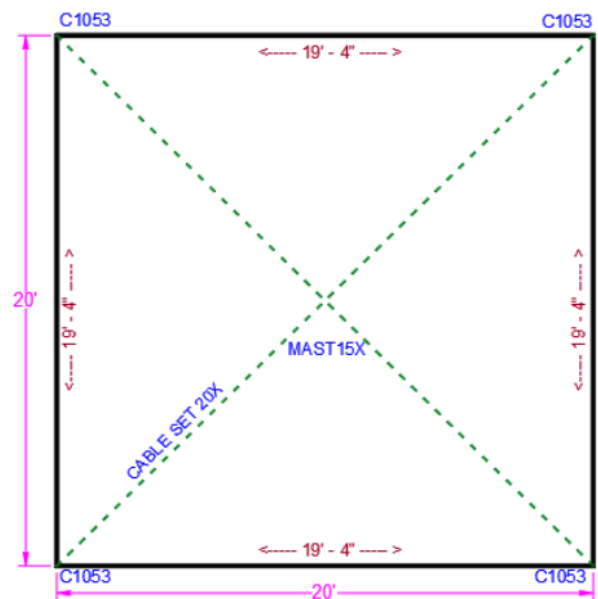

INSTRUCTION:

1. Lay out all fittings (four corners and two tees in the middle). Then lay out all 19'4" poles to form a perimeter.

2. Insert all pins.

3. Hook one side of the cable to the other side. Do the same on the other corner.

Tip: Lift the corner about chest height to loop the cable with a pin.

4. Make sure the cables are very tight when flat on the ground. The frame will have slight deflection (about 0.5 to 2 inches). If the cable is not tight or is too tight, check the dimensions.

5. With the frame flat on the ground, lay out the top. Make sure the top is not caught on the cable or fittings—this may tear the tent. All four corners of the top should be near the corners of the frame.

6. Insert the corner ring into the outside tab at each corner. Do this for all four corners. Again, make sure the tent is not caught on the fittings or the cables. The final corner may require some force to pull into place.

7. Lift one side of the tent. Insert the legs.

8. Insert the mast set, then assemble the flags.

9. Roll the mast onto one side of the cable, then roll it toward the center. Pull the other cable, then insert it into the mast slot. Make sure to place the blue safety cap on.

10. Lift the other side of the tent and insert the legs.

11. Pull the ring on each leg, tie with a ratchet, and loop it onto the baseplate at each leg. Do not tighten the ratchets initially. After all are assembled, go back and tighten them evenly to center the tent.

12. Secure with stakes or other appropriate methods.

